



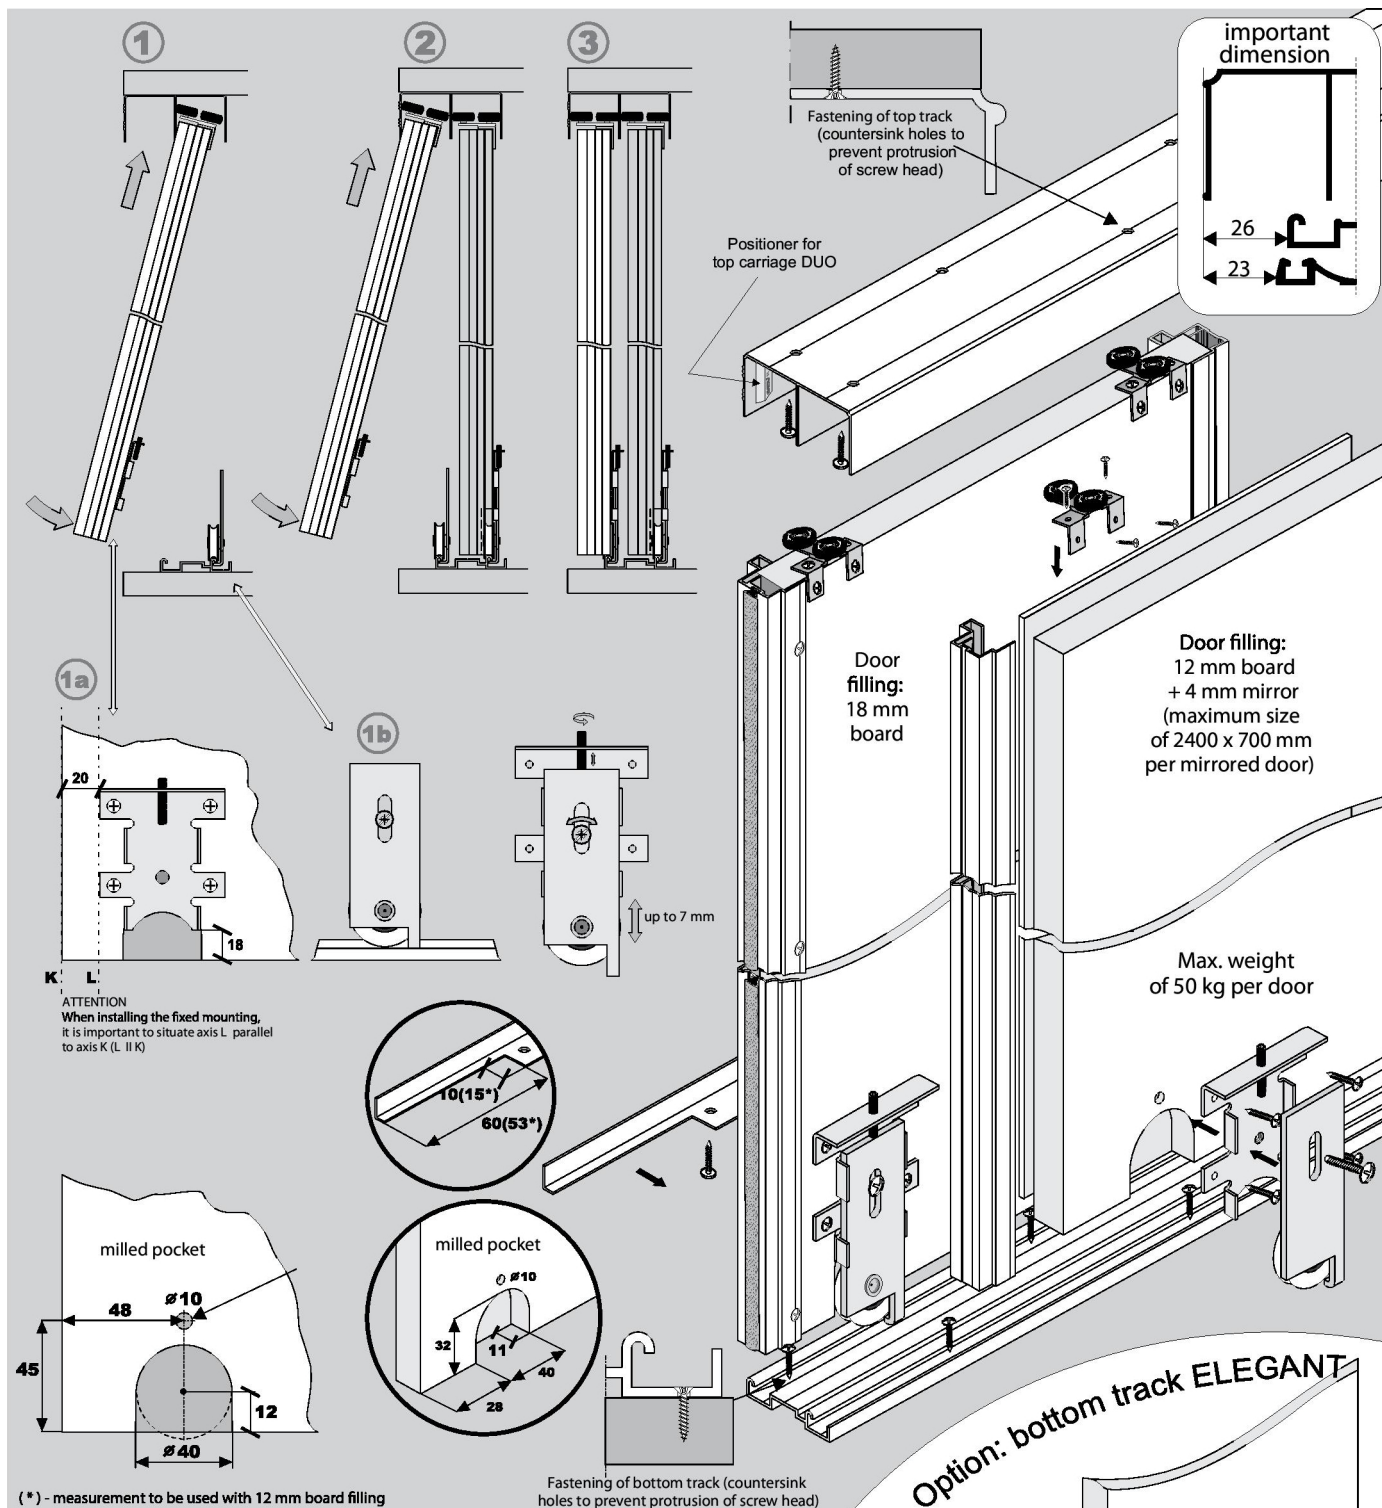


COMPONENTS

Handle FAWORYT II anti-dust brush (with glue) 6.7 mm x 13 mm textile door stop (inserted) 4.8 mm x 4 mm #16 / #18 Length 2.7 m	Top track Gemini - Decor 76 mm Length 1.7 m, 2.35 m, 3.0 m, 4.05 m, 6.0 m	Bottom track Gemini - Decor 53 mm Length 1.7 m, 2.35 m, 3.0 m, 4.05 m, 6.0 m
Angle section Mini 11 mm x 17 mm Length 1.7 m, 2.35 m, 3.0 m	Guiding carriage Focus WPFc-Duo 	Bottom carriage WD18C HI-TEC

With FAWORYT set you may use bottom track ELEGANT along with bottom carriage WD18V HI-TEC. Fitting measurements are not affected.

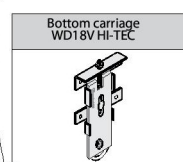


Option: bottom track ELEGANT



Fastening of bottom track (special screw)

Dimensions of opening

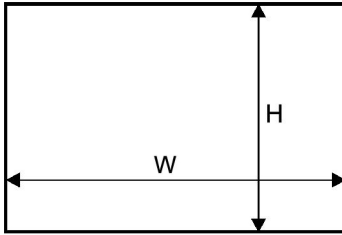


handle length = door height

ATTENTION! Calculations for handle with inserted brush

door height	- h	$h = H - 38 \text{ mm}$
board height	- hb	$hb = h - 2 \text{ mm}$
door width	- w	$w = (W - 3 + Z) : N$
board width #18	- wb	$wb = w - 19 \text{ mm}$
board width #12	- wb _L	$wb_L = w - 7 \text{ mm}$
angle section length	- la	this size is determined after door construction
number of doors	- N	2 3
total overlap	- Z	18 mm 36 mm

visual design - 4 wings

	$w = (W + 51) : 4$
	$w = (W : 2 + 15) : 2$

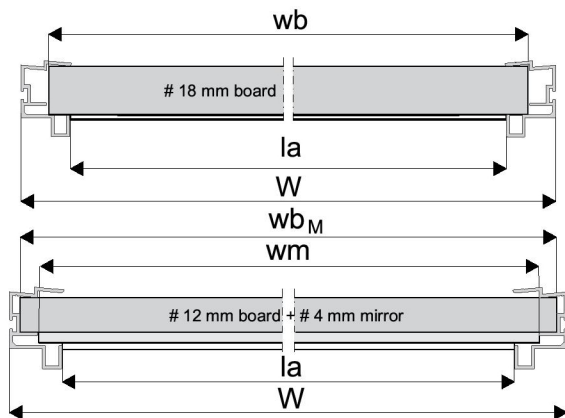


mirror dimension

mirror height - hm = hb - 4 mm

mirror width - wm = wb_L - 16 mm


ATTENTION:
Board to mirror contact area should be free from dirt and grease before applying double-sided tape.

Broken line indicates recommended positioning of double-sided tape

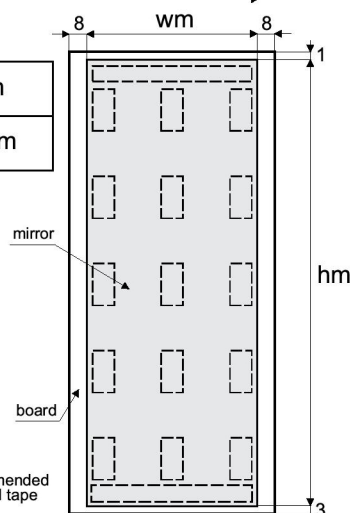


- When fitting handle profiles, do not use assembly adhesive
- The handle should be fixed to board with fastening screws on the inner door face


Installation method for handle and guiding carriage with # 18 mm board

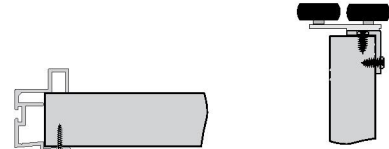

Installation method for handle and guiding carriage with # 12 mm board + # 4 mm mirror

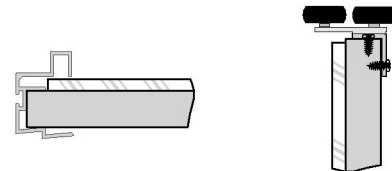

Installation method for angle section 11 mm x 17 mm

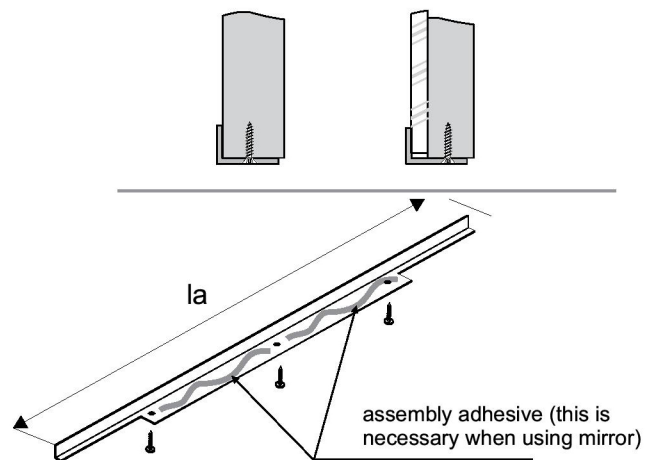

ATTENTION !

Angle section must be fastened to board with minimum 3 screws $\varnothing 3 \times 25$.

ATTENTION !
Handle profile should be 2mm longer than board height.

WARNING
SEVROLL does not bear any responsibility for deformation resulting from the application of improper quality of boards (improper storage, improper humidity)