




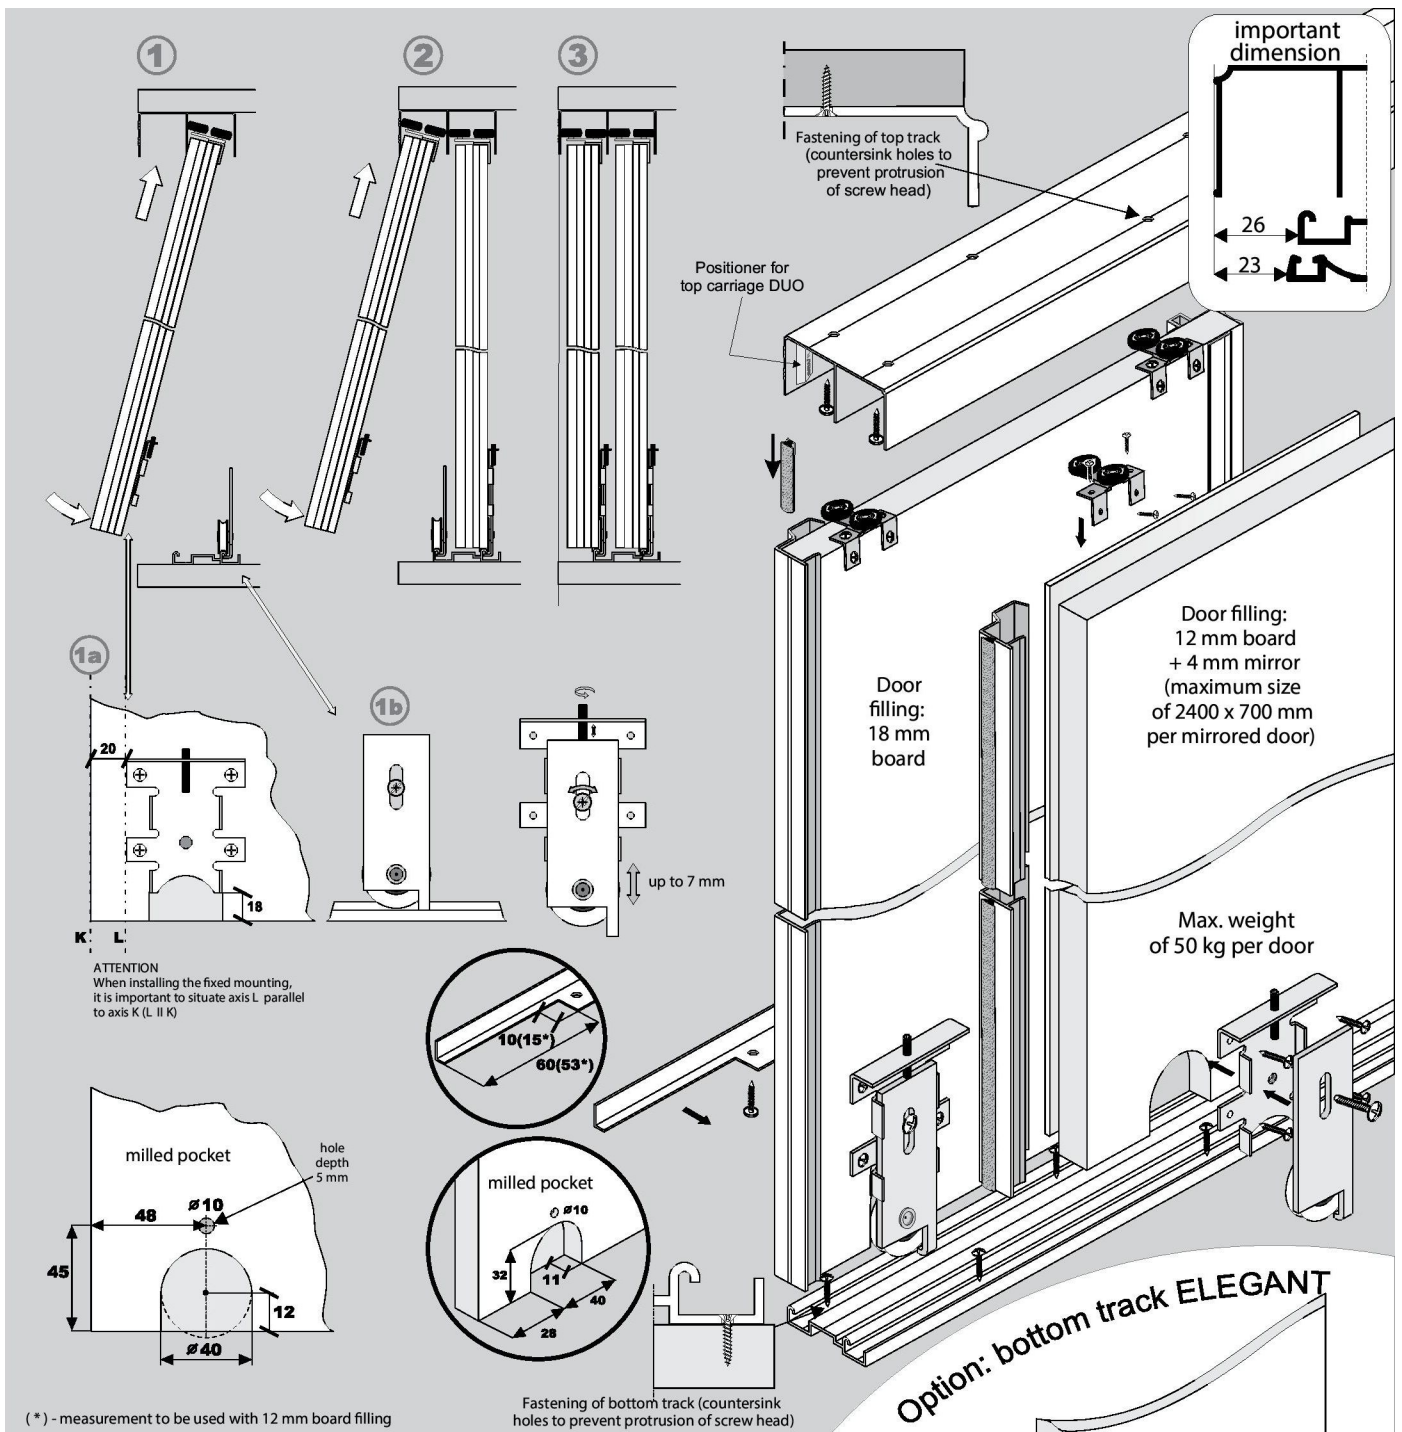

COMPONENTS

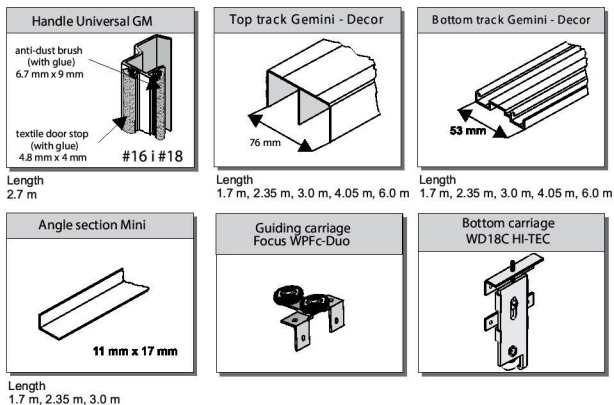

Dimensions of opening

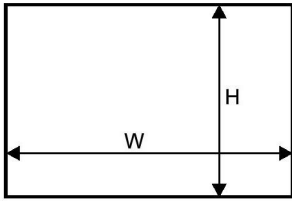


handle length = door height

door filling - # 18 mm or # 12 board
with # 4 mm mirror

door height	- h	$h = H - 38 \text{ mm}$
board height	- hb	$hb = h - 2 \text{ mm}$
door width	- w	$w = (W - 3 + Z) : N$
board width	#18 - wb	$wb = w - 7 \text{ mm}$
board width	#12 - wb _m	$wb_m = w - 7 \text{ mm}$
angle section length	- la	this size is determined after door construction

number of doors	- N	2	3
total overlap	- Z	32 mm	64 mm

visual design - 4 wings	
	$w = (W + 93) : 4$
	$w = (W : 2 + 29) : 2$

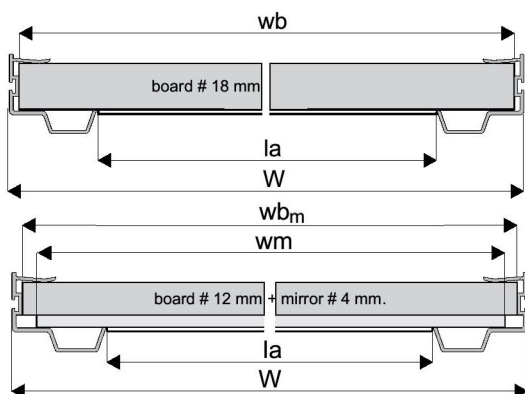


mirror dimension

mirror height - $hm = hb - 4 \text{ mm}$

mirror width - $w_m = wb_m - 34 \text{ mm}$


ATTENTION:
board to mirror contact area
should be free from dirt
and grase before applying
double-sided tape

Broken line indicates recommended
positioning of double-sided tape

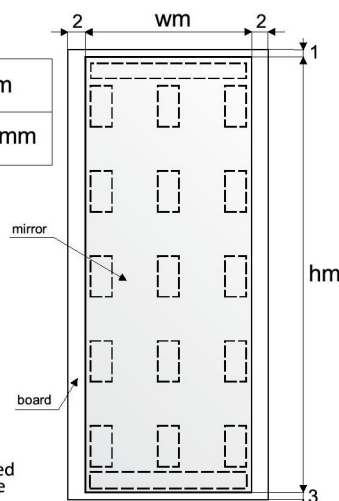


- When fitting handle profiles, do not use assembly adhesive
- The handle should be fixed to board with fastening screws on the inner door face


Installation method for handle
and guiding carriage with # 18 mm board

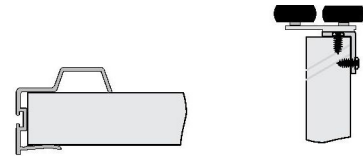

Installation method for handle and guiding carriage
with # 12 mm board + # 4 mm mirror

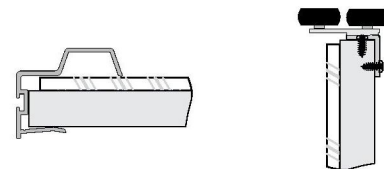

Installation method for angle section 11 mm x 17 mm

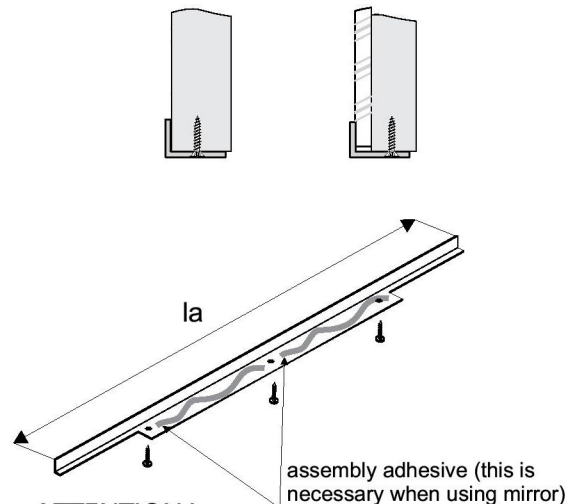

ATTENTION !

Angle section must be fastened
to board with minimum 3 screws $\varnothing 3 \times 25$.

ATTENTION !

Handle profile should be 2mm
longer than board height.

WARNING

SEVROLL does not bear any responsibility
for deformation resulting from the application
of improper quality of boards
(improper storage, improper humidity)