



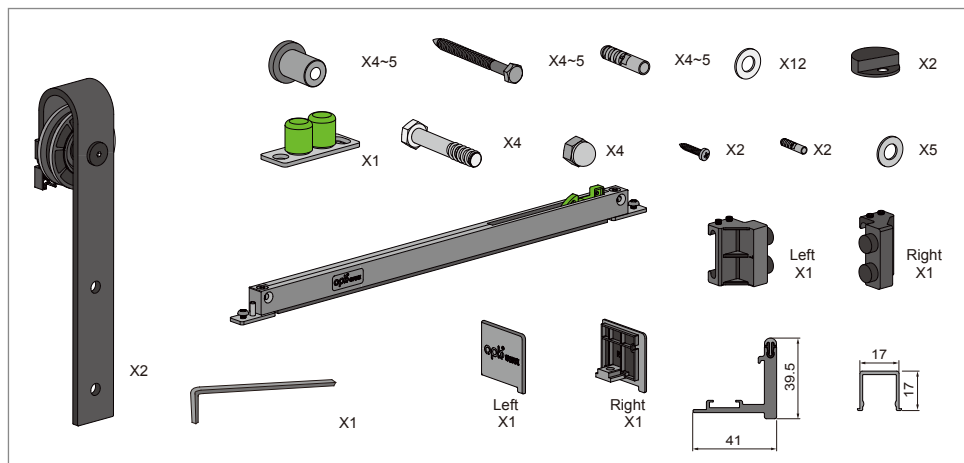


- 1.Ensure the bearing capacity is enough before installation
- 2.Products can't be used for hollow wall and bubble wall

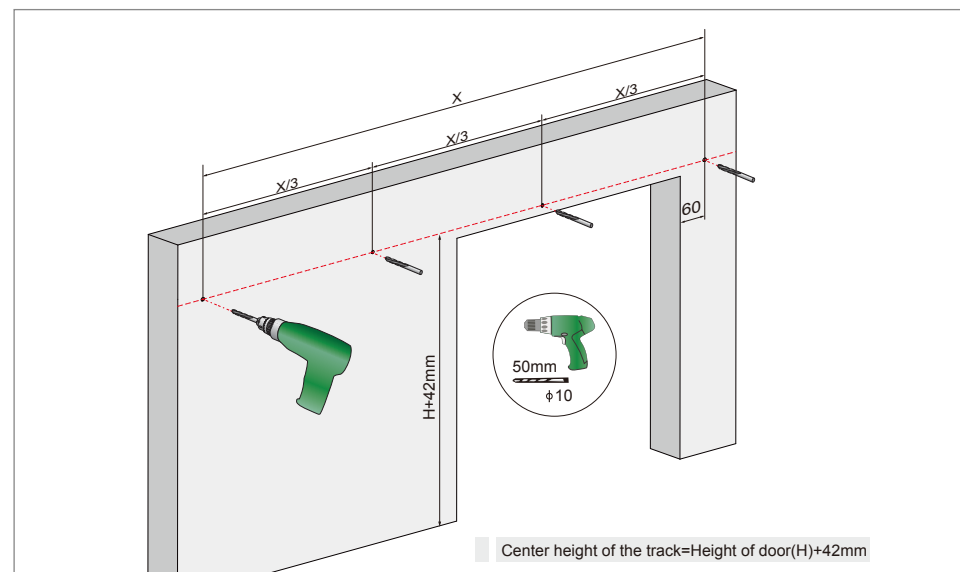


2 Trepanning position of door opening




1 Request of track trepanning and door

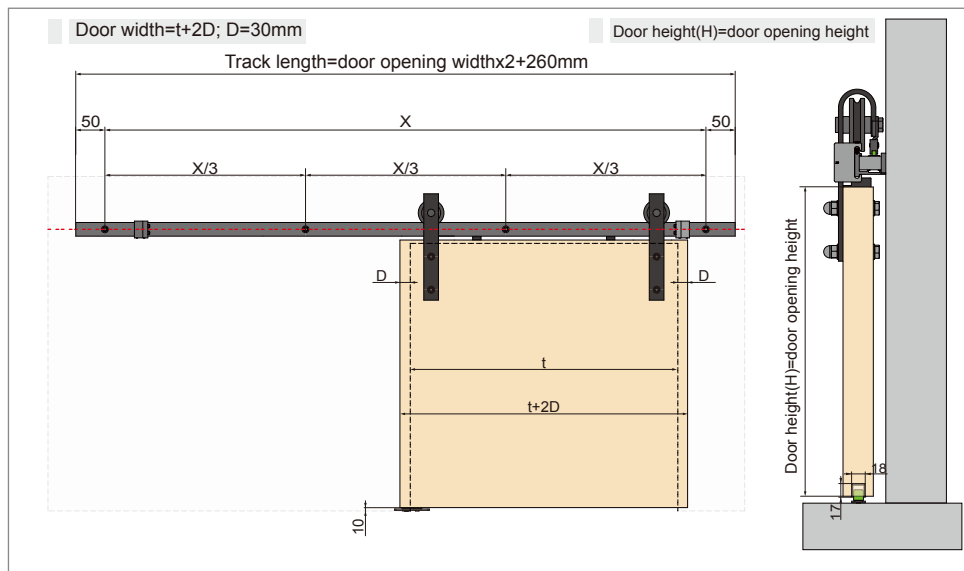


3 Door machining parameter

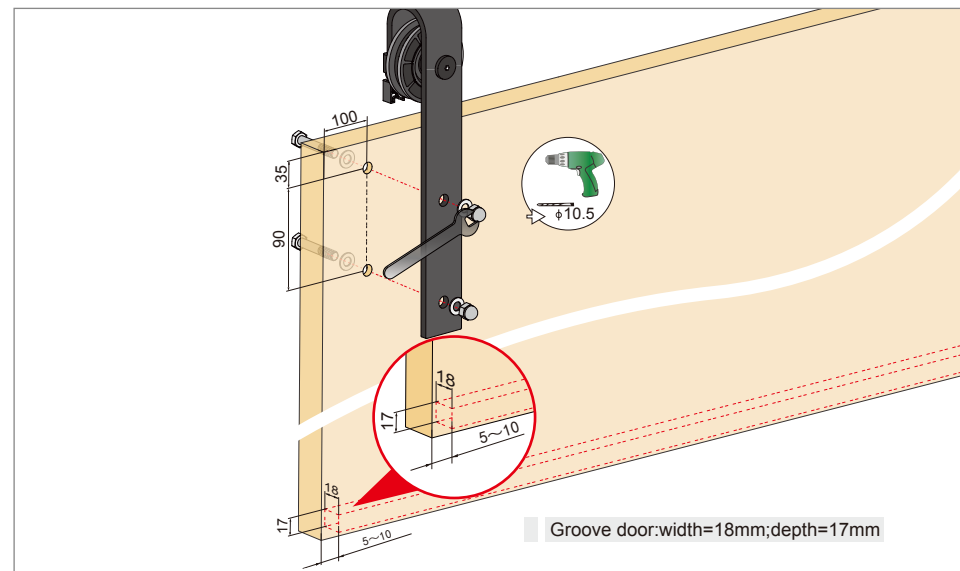


4 Install damper

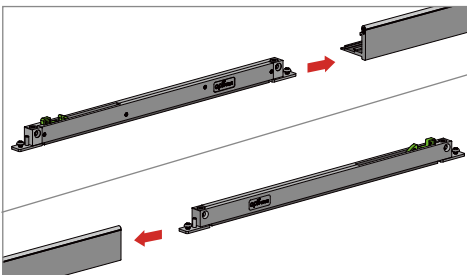


5 Install stopper

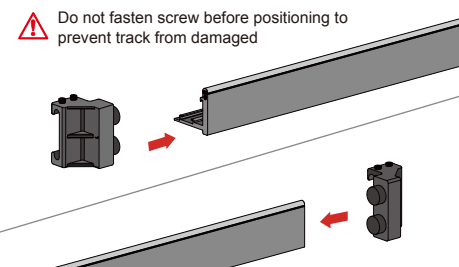


6 Connect track

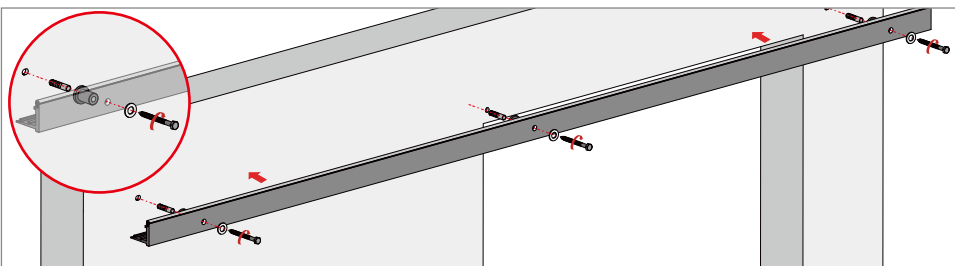


7 Install anti-jumping rubber mat

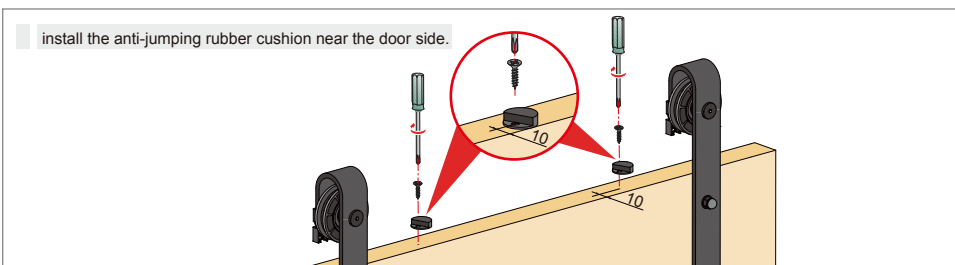


8 Install the bottom track

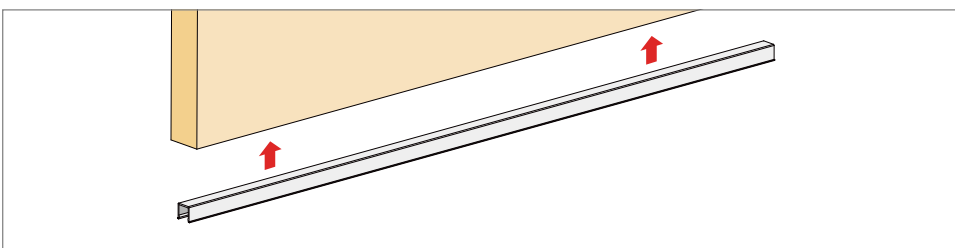


9 Install the door panel and adjust the anti-jumping rubber mat

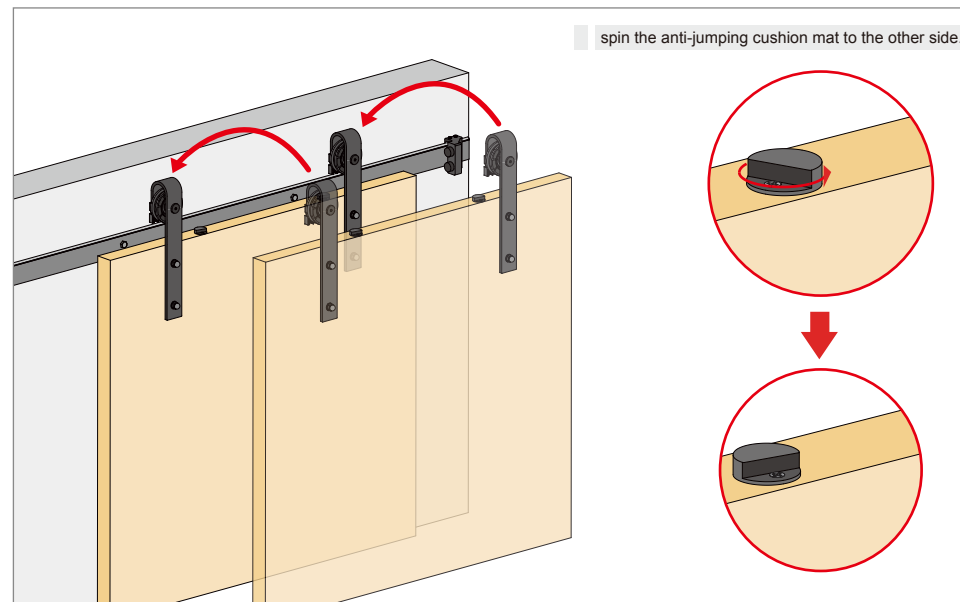


10 Install bottom guide

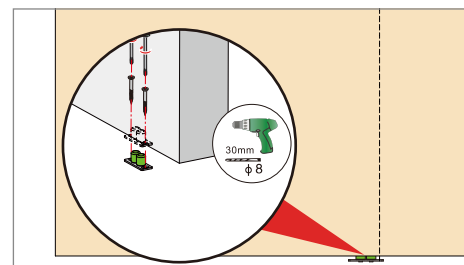

11 Adjust damper

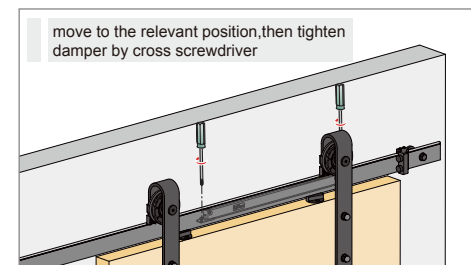

12 Adjust stopper

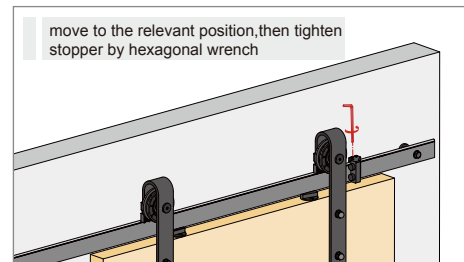

13 Install decorative profile

